

Liquid Turbine Flow Meter
Operation Manual



Turbine Flow Meter Model: MD

Liquid Turbine Flow Meter Operation Manual



Table of Contents

1. General Information	3
Product Description	3
2. Technical Data	4
3. Cautions for Installation	7
3.1 Mounting Positions	7
3.2 Required Lengths of Runs	8
3.3 Anti-Cavitation	9
3.4 Connections	10
4. Electrical Wiring	14
4.1 MDGY- N1	14
4.2 MDGY- N2	14
4.3 MDGY- A	14
4.4 MDGY- E	15
(1) 2 wire 4-20mA Output	16
(2) 3 wire 4-20mA Output	16
(3) Frequency Output	16
(4) RS485 Communication	17

Table of Contents

5. Programming and Setup	20
5.1 MDGY- N1: No Display; Pulse Output	20
5.2 MDGY- N2: No Display; Explosion-proof Pulse Output	20
5.3 MDGY- A: No Display; 2 wire 4-20mA Output	20
5.4 MDGY- E: Local Display; 4~20mA/ Pulse Output	21
6. Pressure Drop	28
7. Troubleshooting	29
Other Products	30

Notice: The MDGY Type and the MDLWS Type are universal.

1. GENERAL INFORMATION

This manual will assist you in installing, using and maintaining Liquid Turbine Flowmeter. It is your responsibility to make sure that all operators have access to adequate instructions about safe operating and maintenance procedure.



Warning

For your safety, review the major warnings and cautions below before operating this equipment.

1. Use only fluids that are compatible with the housing material and wetted components of your Liquid turbine flow meter.
2. When handling hazardous liquids, always exercise appropriate safety precautions.
3. When measuring flammable liquids, observe precautions against fire or explosion.
4. When working in hazardous environments, always exercise appropriate safety precautions.
5. Handle the sensor carefully . Even small scratches or nicks can affect accuracy.
6. For best results, calibrate the meter at least 1 time per year.
7. Do not purge the flow meter with compressed air.
8. During Liquid Turbine Flowmeter removal, liquid may spill. Follow the manufacturer's safety precautions for clean up of minor spills

Product Description

Operating Principle

Liquid flows through the turbine housing causing an internal rotor to spin. As the rotor spins, an electrical signal is generated in the pickup coil. This signal is converted into engineering units (liters, cubic meters, gallons etc.) on the local display where is applicable. Optional accessory modules can be used to export the signal to other equipment.

Upon receipt, examine your meter for visible damage. The turbine is a precision measuring instrument and should be handled carefully. Remove the protective plugs and caps for a thorough inspection. If any items are damaged or missing, contact us.

Make sure the turbine flow model meets your specific needs. For your future reference, it might be useful to record this information on nameplate in the manual in case it becomes unreadable on the turbine. Refer to the nameplate for your customized product's specification.

2. TECHNICAL DATA

Measuring System

Application Range	Liquid: Water; Diesel; Gasoline
	(1) Without Impurity
	(2) Low Viscosity
Measured Value	
Primary Measured Value	Flow Rate
Secondary Measured Value	Volume Flow

Design

Features	
Modular Construction	The measurement system consists of a flow sensor and a signal converter. It is available as compact and as separate version.
Compact Version Converter	MDGY- N1: No display; pulse output
	MDGY- N2: No display; explosion-proof pulse output
	MDGY- A: No display; 2 wire 4-20mA output
	MDGY- E: Local display; 4~20mA/ pulse output; RS485
Connection	Thread: DN4-DN50
	Flange: DN4-DN200 (DIN, ANSI, JIS)
	Wafer: DN4-DN200
	Tri-Clamp: DN4-DN100
Measurement Ratio	Standard - 10:1; Optional - 20:1

Liquid Turbine Flow Meter
Operation Manual

Process Connections

Flange	
EN 1092-1	DN4...200 in PN 6...40
ASME	1/2 " ...8 " in 150 lb RF
JIS	1/2 " ...8 " in 10...20K
Design of Gasket Surface	RF
Other Sizes or Pressure Ratings on Request	
Thread	DN4...DN50 in PN63

Measurable Flow Range

Diameter	Standard Flow Range	Extended Flow Range
(mm)	(m/h)	(m/h)
4	0.04 to 0.25	0.04 to 0.4
6	0.1 to 0.6	0.06 to 0.6
10	0.2 to 1.2	0.15 to 1.5
15	0.6 to 3.6	0.5 to 5
20	0.8 to 8	0.45 to 9
25	1 to 10	0.5 to 10
32	1.5 to 15	0.8 to 15
40	2 to 20	1 to 20
50	4 to 40	2 to 40
65	7 to 70	4 to 70
80	10 to 100	5 to 100
100	20 to 200	10 to 200
125	25 to 250	13 to 250
150	30 to 300	15 to 300
200	80 to 800	40 to 800

Note: The flow range above is for reference only. Consult the factory if you have special requirement. Refer to the nameplate or certificate for actual flow range.

Liquid Turbine Flow Meter
Operation Manual

Measuring Accuracy

Reference Conditions	Flow conditions similar to EN 29104
	Medium: water
	Electrical conductivity: $\geq 300 \mu\text{S/cm}$
	Temperature: $+10...+30^{\circ}\text{C}$ / $+50...+86^{\circ}\text{F}$
	Inlet section: $\geq 10 \text{ DN}$
Flow Meter Accuracy	Operating pressure: 1 bar / 14.5 psig
	Standard: $\pm 1.0\%$ of rate
	Optional: $\pm 0.5\%$ of rate

Installation Conditions

Installation	Take care that flow sensor is always fully filled
	For detailed information see chapter "Cautions for Installation"
Flow Direction	Forward
	Arrow on flow sensor indicates flow direction
Inlet Run	$\geq 10 \text{ DN}$
Outlet Run	$\geq 5 \text{ DN}$

 
Materials

Sensor Housing	SS304		
	Other materials on request		
Flanges	SS304		
	Other materials on request		
Rotor			
Standard: 2Cr13	EN10088-3	1.4021	X20Cr13
	ANSI	420	
	BS	420S37	
	JIS	SUS410J1	
Optional: CD4MCU	DN15...DN80		
Bearing and Shaft	Tungsten Carbide		
Converter Housing	Standard: Polyurethane coated die-cast aluminum		

3. CAUTIONS FOR INSTALLATION


3.1 Mounting Positions

- ★ Pipes must be fully filled with liquids. It is essential that pipes remain fully filled at all times, otherwise flow rate indications may be affected and measurement errors may be caused.



Mounting Positions

 - ★ Avoid Air Bubbles. If air bubbles enter a measurement pipe, flow rate indications may be affected and measurement errors may be caused.





Avoiding Air Bubbles

- ★ Avoid all pipe locations where the flow is pulsating, such as in the outlet side of piston or diaphragm pumps
- ★ Avoid locations near equipment producing electrical interference such as electric motors, transformers, variable frequency, etc.
- ★ Install the meter with enough room for future access for maintenance purposes


Warning: Precaution for direct sunshine and rain when the meter is installed outside.

3.2 Required Lengths of Straight Runs

 Flow altering device such as elbows, valves and reducers can affect accuracy. See diagram below for typical flow meter system installation.

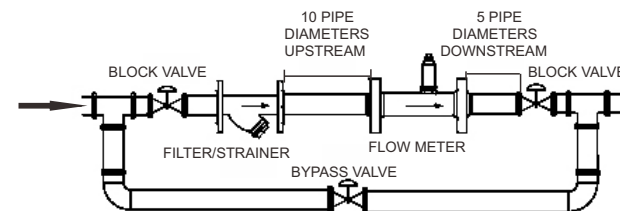


Concentric Contraction
Fully Open Valve

 


Concentric Expansion Valve



 
Two 90 Degree Bents
on Different Levels



One 90 Degree Bend

 

Two 90 Degree Bents
on One Level

 

Half Opening Valve
of Regulating Valve

Liquid Turbine Flow Meter Operation Manual

The recommended guidelines are given to enhance accuracy and maximize performance. Distance given here are minimum requirements; double them for desired straight pipe lengths.

- ★ Upstream: allow a minimum straight pipe length at least 10 times the internal diameter of the pipe. For example, with the 50mm pipe, there should be 500mm of straight pipe immediately upstream. Desired downstream straight pipe length is 1000mm.
- ★ Downstream: allow a minimum straight pipe length at least 5 times the internal diameter of the pipe. For example, with the 50mm pipe, there should be 250mm of straight pipe immediately upstream. Desired downstream straight pipe length is 500mm.

3.3 Anti-Cavitation

Cavitation can be caused by entrained air. An amount higher than about 100 mg/l of entrained air or gas can produce error. In addition, cavitation can be caused by too little backpressure on the flow meter. For our turbine flow meters, you should provide a backpressure (downstream pressure) of at least 1.25 times the vapor pressure, plus 2 times the pressure drop through the flow meter. See formula 1.

$$\text{Formula 1: } P_b \geq 1.25 \times P_v + 2 \times (P_{in} - P_{out})$$

In formula 1: (Pb: Back pressure; Pv: Vapor Pressure; Pin: Inlet Pressure; Pout: Outlet Pressure) Create backpressure by installing a control valve on the downstream side of the meter at the proper distance detailed above.



Special Notice

- ★ External material in the liquid being measured can clog the meter's rotor and adversely affect accuracy. If this problem is anticipated or experienced, install screens to filter impurities from incoming liquids.
- ★ To ensure accurate measurement, drain all air from the system before use.
- ★ When the meter contains removable coverplates. Leave the coverplate installed unless accessory modules specify removal. Don't remove the coverplates when the meter is powered, or electrical shock and explosion hazard can be caused.

Liquid Turbine Flow Meter Operation Manual


3.4 Connections

3.4.1 Thread Connection

Note: Default Thread is G Male Thread, other thread are available on request. For example: NPT Female Thread, NPT Male Thread; Consult us for more information

DN4...DN10: Straight pipe and filter are included for DN4 to DN10, as default;

DN15...DN50: Straight pipe are optional on request.

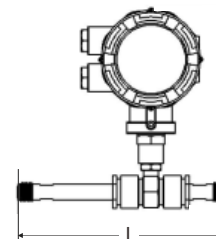

DN4 to DN10



Filter and Straight Pipe




Diameter(mm)	L(mm)	Thread Criteria
4	225	G½"
6	225	G½"
10	345	G½"
15	75	G1"
20	80	G1"
25	100	G1-¼"
32	140	G2"
40	140	G2"
50	150	G2-½"

Liquid Turbine Flow Meter Operation Manual

3.4.2 Flange Connection

Flange	
EN 1092 - 1	DN4...200 in PN 6...40
ASME	1/2" ...8" in 150 lb RF
JIS	1/2" ...8" in 10 ...20k
Design of Gasket Surface	RF
	Other sizes or pressure ratings on request

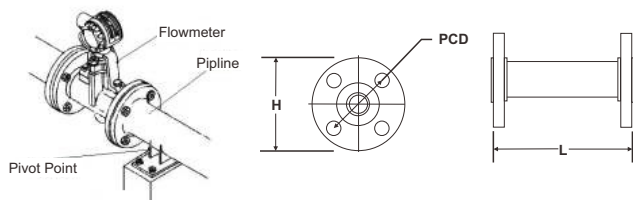

ANSI 150# Flange Meter Dimensions							
Size Code		L (mm)	ANSI Flange Rating Class	Flange Diameter (H) (mm)	Bolt Hole Diameter (mm)	Bolt Circle Diameter (PCD) (mm)	Bolt Hole Quantity
(Inch)	(mm)						
1/2"	15	75	150	89	16	60	4
3/4"	20	80	150	99	16	70	4
1"	25	100	150	108	16	79	4
1-1/4"	32	140	150	115	16	89	4
1-1/2"	40	140	150	127	16	99	4
2"	50	150	150	152	19	121	4
2-1/2"	65	170	150	180	19	140	4
3"	80	200	150	191	19	152	4
4"	100	220	150	229	19	191	8
5"	125	250	150	255	22	216	8
6"	150	300	150	279	22	241	8
8"	200	360	150	343	22	298	8


Liquid Turbine Flow Meter Operation Manual

DIN PN16 Flange Meter Dimensions							
Size Code		L (mm)	DIN Flange Pressure Rating MPa	Flange Diameter (H) (mm)	Bolt Hole Diameter (mm)	Bolt Circle Diameter (PCD) (mm)	Bolt Hole Quantity
(Inch)	(mm)						
1/2"	15	75	2.5	95	14	65	4
3/4"	20	80	2.5	105	14	75	4
1"	25	100	2.5	115	14	85	4
1-1/4"	32	140	2.5	140	14	100	4
1-1/2"	40	140	2.5	150	18	110	4
2"	50	150	2.5	165	18	125	4
2-1/2"	65	170	1.6	185	18	145	4
3"	80	200	1.6	200	18	160	8
4"	100	220	1.6	220	18	180	8
5"	125	250	1.6	250	18	210	8
6"	150	300	1.6	285	22	240	8
8"	200	360	1.6	340	22	295	12

Liquid Turbine Flow Meter Operation Manual

3.4.3 Sanitary Connection (Max. Pressure: 10bar)

a	DN4-DN40	1mm
	DN50-DN80	1.5mm
	DN100	2mm

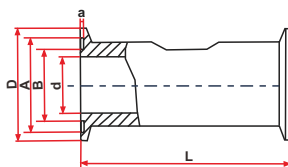

Diameter (mm)	D (mm)	A (mm)	B (mm)	d (mm)	L (mm)
DN 4	50.5	46	40.5	4	100
DN 6				6	
DN10				10	
DN15				15	
DN20				20	
DN25				25	
DN32				32	120
DN40	64	59	54	40	140
DN50	77	73.5	68.5	50	150
DN65	91	86	80.5	65	170
DN80	106	94	94	80	200
DN100	119	106	106	100	220


Liquid Turbine Flow Meter Operation Manual

4. ELECTRICAL WIRING

4.1 MDGY-N1: Pulse Output; Basic Type; No Local Display

Cable Color	Terminal Symbols	Description
Red Wire	24V (+)	Power Supply: "24V+"
Blue Wire	Pulse	Pulse Output
Black Wire	24V (-)	Power Supply: "24V-"

4.2 MDGY-N2: Pulse Output; Explosion Proof Type; No Local Display

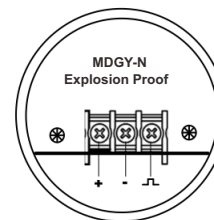


Terminal Configuration

Terminal Symbols	Description
+	Power Supply: "24V+"
-	GND
	Pulse Output

Terminal Wiring

4.3 MDGY-A: Two-wire 4-20mA Output; No Local Display

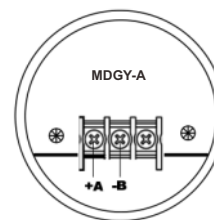

Terminal Configuration


Terminal Symbols	Description
+A	Power Supply: "24V+"
-B	Current Output

Terminal Wiring

Liquid Turbine Flow Meter Operation Manual

4.4 MDGY-E

Terminal Board of E Type

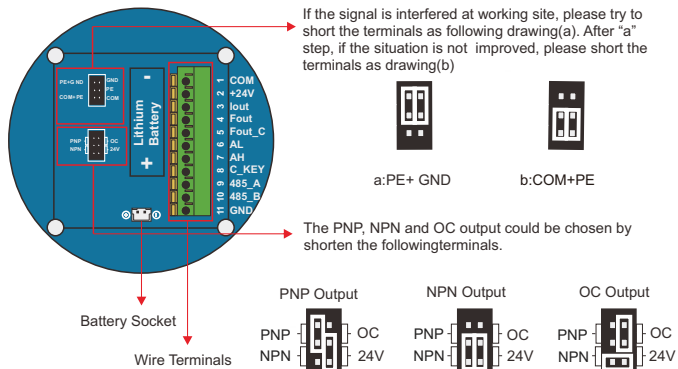

Wire Terminals


Type	Terminals	Description
2-wire 4~20mA Output	2	24V DC+
	3	(Iout) Current Output
Frequency & Pulse Output	1	(COM) 24V DC-
	2	24V DC+
	5	(Fout_C) Frequency/ Pulse Output
3 wire 0-20mA Output 3 wire 4-20mA Output	1	(COM) 24V DC-
	2	24V DC+
	3	(Iout) Current Output
RS485 Optional for E2,E4,E5	9	(Optional) RS485_A
	10	(Optional) RS485_B

* Note: Terminal Symbols and Description


COM	Power Supply: "DC 24V-"	AL	Instantaneous Flow Low Limit Alarm
DC24+	Power Supply: "DC 24V+"	AH	Instantaneous Flow High Limit Alarm
Iout	Current Output	C_KEY	External Button Positive Terminal
Fout	Calibration Pulse Output	GND	External Button Negative Terminal
Fout_C	Pulse or Scaled Pulse Output	485_A	RS_485 Communication A Terminal
		485_B	RS_485 Communication B Terminal

Liquid Turbine Flow Meter Operation Manual


(1) 2 wire 4-20mA Output

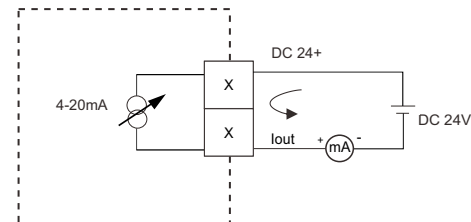



(2) 3 wire 4-20mA Output

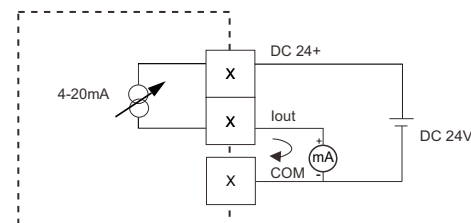


(3) Pulse/Scaled Pulse Output

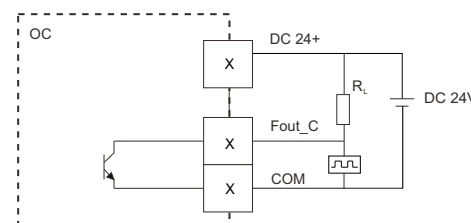

Liquid Turbine Flow Meter Operation Manual

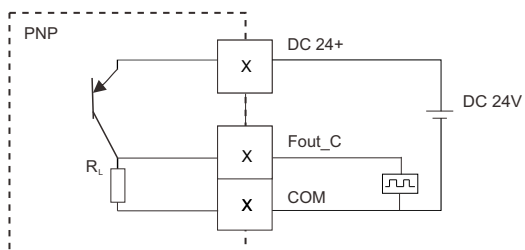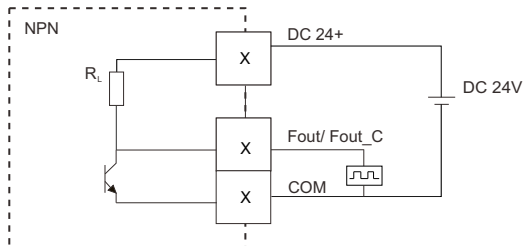

(4) RS485 Communication

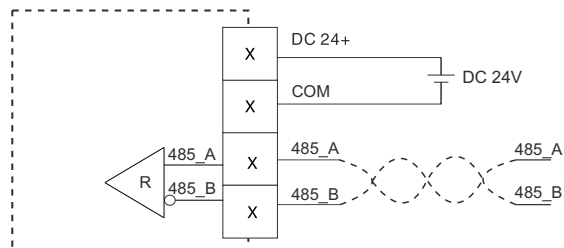

Liquid Turbine Flow Meter Operation Manual

Modbus - RTU Protocol RS485

Function Code	Explanation
03(HEX)	Read single or multi register

Data Format

There are two types of data in this protocol: float and integer.

The read-write property of date in register: R-Read only; W-Write; R/W- Read & Write

1. Single Float (Format: IEEE754, data from high digit to low)

There are 32 bits (4 bytes) for single float data,

The bits are laid out from high to low: 31, 30, and 29...0 digit

2. Double-precision Float (Format: IEEE754, data from high digit to low)

There are 64 bits (8 bytes) for double-precision float data.

The bits are laid out from high to low: 63, 62, 61...0 digit

3. Unsigned int: 0-65535

Register Table

Privilege	Name	Register Address (Hex)	Register Quantity	Register Length	Data Type	Description
R	Total Flow	0	4	8	Double	
R	Total Flow	4	2	4	Float	
R	Flow Rate	6	2	4	Float	
R/W	Unit	8	1	2	Unsigned Unit	0: m³/h
						1: L/h
						2: L/m
						3: US Gal/min
						4: UK Gal/min
						5: US Gal/h
						6: UK Gal/h
						7: kg/h
						8: t/h
						9: ft³/h
R	Voltage	9	2	4	Float	Unit: V

Error Response Code

01: Address Error

02: Length Error

03: CRC Validation Error

04: Code Error

5. PROGRAMMING AND SETUP



All flowmeters are tested and calibrated before send out, and the unique K-factor is provided on the calibration certificate. Keep the calibration certificate well to avoid the loss of K-factor.

5.1 MDGY-N1: No display; Pulse Output

Customer should set the correct K-factor into PLC or Flow totalizer in order to get the correct flow rate.

5.2MDGY-N2: No display; Pulse Output; Explosion-Proof

It has explosion-proof function .

5.3 MDGY-A: No Display; 2 wire 4-20mA Output

Only perform the Zero Point Calibration where it's necessary.

5.3.1 Zero Point Calibration

- (1) Shut off the value where the flowmeter is installed, ensure there is no flow rate in pipe.
- (2) Put high accuracy amperometer into the circuit loop as series connection.
- (3) Adjust the potentiometer W502 to make sure the display on amperometer is 4mA.

5.3.2 Full Scale Calibration:


It's ONLY available for factory; Return the flowmeter to factory for full scale calibration where is applicable.

5.4 MDGY-E: Local Display; 4~20mA/ Pulse Output

Note: all menus are present in all signal converter versions, but some parameter settings are ONLY valid for specified models.

5.4.1 Display and Key

Five Sections on Display Screen

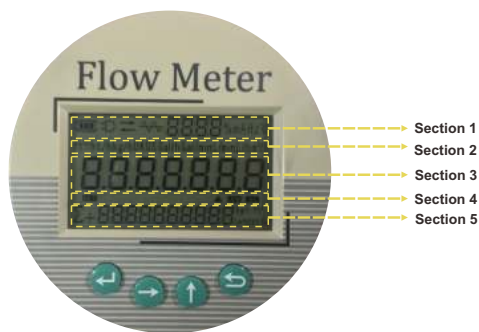

Section 1: Functional region which consists of battery situation, communication, current, frequency, flow percentage (Temperature could be available on request)

Section 2: Units section which consists of 10 units: m/h, L/h, L/min, US Gal/min, UK Gal/min, US Gal/h, UK Gal/h, kg/h, t/h, ft/h³

Section 3: Flow rate (7 digital figure upper line)

Section 4: Alarm sign which consists of SET prompt and alarm prompt

Section 5: Total flow (11 digital figure lower line) with two decimal places

Buttons

Interface buttons (four keys)

Buttons		
Interface Buttons		Turn page/Confirm
		Move Cursor
		Increase number/ Turn page
		Exit

Operation

Menu				
Main Menu	Go to sub-menu	x	x	x
Sub-menu	Go to password menu	x	x	Back to main menu
Password Menu	a. False or No password will go to the next menu b. Correct password: The parameter is settable	Move Cursor	Set parameter	Back to main menu
Settable Menu	Set/Save	Move Cursor	a. Settable status: increase number or choose number; b. Un-settable status: Turn to previous menu.	Cancel the setting and back to main menu
Un-settable Menu	Turn to next menu	x	Turn to previous menu	Back to main menu

Liquid Turbine Flow Meter
Operation Manual

5.4.2 Parameters Set

Passwords

Type	Passwords	Note
User password	1234	To modify the P1-P14 parameters
Engineer password	1010	To modify the P16-P33 parameters
Total flow reset	5555	—
Storage factory defaulted	5678	—
Reload factory defaults	1111	—
Total flow set	9999	—

Note: It will display "0000" before input password. If the password is incorrect, it will go to P1 menu automatically under un-settable status.

Passwords	Code	Functions	Parameters	Note
0000	Main menu	Normal display	Display working condition, flow rate, total flow	
	Sub-menu	Frequency display	The second line is original frequency	
			The third line is corrected frequency/signal intensity	Up key can be used to switch
	Password	Password input	4 digital figure	

Liquid Turbine Flow Meter
Operation Manual

Passwords	Code	Functions	Parameters	Note
1234	P1	Unit	0- m³/h	Other parameters setting, the variables associated with units will be related automatically, according to the units of P1 to calculate, such as total flow, flow rate, scaled pulse and so on
			1- L/h	
			2- L/min	
			3- US Gal/min	
			4- UK Gal/min	
	P2	Damping Time	01-99s	To slow flow changes and prevent jump
	P3	Maximum Flow Rate	Maximum Flow settings, the unit corresponds to the flow.	Exceed the maximum flow, showing the imum flow
	P4	Minimum Flow Rate	Minimum flow settings, the unit corresponds to the flow.	When the flow rate is lower than minimum flow rate, the flow rate will show "0"
	P5	Max frequency Output	The upper limit setting of measuring frequency	When it exceeds the upper limit, it will display max value
	P6	Relative Density	Absolute density of medium, Unit: kg/m³	Use quality units It will be used in the calculation
	P7	Frequency Output Mode	0- No frequency output	Select Parameter
			1- Corrected pulse output after linearization	
			2- Scaled pulse output	
	P8	Scaled-pulse Output	0.01:0.01L/Pulse 0.1:0.1L/Pulse 1:1L/Pulse...	Unit is in accord with P1 menu
	P9	Pulse Width	1 ~ 2000 ms	The width setting of scaled pulse
	P10	Communication	0: RS485 1: Hart	1: It's available to current output with HART version

Liquid Turbine Flow Meter Operation Manual

Passwords	Code	Functions	Parameters		Note
1234	P11	Communication Parameter	RS485	Address	0-255
				Baud Rate	1200, 2400, 4800, 9600, 19200
				Verification	N, O, E
				Data Length	7, 8
				Stop Bits Length	1, 2
			HART	Address	0-255
	P12	High Limit Alarm	Switch Settings	Yes	On
				no	Close
			Alarm Level	HIGH	High Level
				LOW	Low Level
	P13	Low Limit Alarm	Alarm Value		Alarm Value
			Switch Settings	Yes	On
				no	Close
			Alarm Level	HIGH	High Level
				LOW	Low Level
	P14	Backlight	Working Mode	0- Off mode	2: 2-wire power supply shuts down; 3-wire power supply normally opens; battery powered button turns off the delay. Long press Esc key to switch 0 mode and 1 mode, searching network.
				1- Automatic mode	
				2- On mode	
			Brightness Setting	0-30%	
				1-70%	
				2-100%	

Liquid Turbine Flow Meter Operation Manual

Passwords	Code	Functions	Parameters	Note
9999	P15	Total Flow	Modifying total flow value	
1010	P16 ~ P23	Linearization of the Flowcurve	The first line is corrected frequency, the second line is coefficient error P16-P23 F1~F8: eight coefficient modification $Wn=Kn / KP (n: 1\sim8) 3$	F1 must be started, and F2-F8 are started in proper order. If the factor is 0, this point and following corrected points should be stopped
	P24	Correct Coefficient	The first line shows the corrected frequency; the second line shows the meter coefficient, and the unit of coefficient is pulse/m ³	It could be any of the coefficient (Kn) from F1~F8 or Max one or Average
	P25	Diameter	Selecting the diameter of body and sensor	Unit: mm
	P26	Medium	0- Gas 1- Liquid	the type selection of measured fluid
	P27	Min Vibration Strength	The collection value in second line in the process of learning can be manually changed	P27-P30 Self learning antivation : Continue to press the up button 5 seconds, and the countdown is completed in 60 seconds. Notice: this operation is prohibited when there is flow rate
	P28	Max Vibration Strength	The third line shows the strength of the current signal	
	P29	Min Vibration Frequency	The collection value in second line in the process of learning can be manually changed	
	P30	Max Vibration Frequency	The third line shows the frequency of the current signal	
	P31	Min Working Frequency	Lowest acceptable signal frequency The third line shows the current signal frequency	Meter working area setting Instruction: in the pipeline of having slight vibration, it can significantly enhance the capacity of resisting disturbance through the three screen parameter settings and strict limit of effective range
	P32	Max Working Frequency	Highest acceptable signal frequency The third line shows the current signal frequency	
	P33	Min Signal Intensity	Lowest acceptable signal frequency The third line shows the current signal intensity	

Liquid Turbine Flow Meter
Operation Manual

Menu	Parameter Name	Setting Method	Grade	Range
P--14	Backlight	Select Parameter	User	0: Off Backlight
				1: Automatic mode
				2: ON mode
P--15	Total Rate	Input Value	User	It could be modified with right code
P--16 F--1	Linearization of the Flowcurve: point 1	Input Value	Factory ONLY	First Row: Frequency (P1)
				Second Row: K-Factor (P1)
P--17 F--2	Linearization of the Flowcurve: point 2	Input Value	Factory ONLY	First Row: Frequency (P2)
				Second Row: K-Factor (P2)
P--18 F--3	Linearization of the Flowcurve: point 3	Input Value	Factory ONLY	First Row: Frequency (P3)
				Second Row: K-Factor (P3)
P--19 F--4	Linearization of the Flowcurve: point 4	Input Value	Factory ONLY	First Row: Frequency (P4)
				Second Row: K-Factor (P4)
P--20 F--5	Linearization of the Flowcurve: point 5	Input Value	Factory ONLY	First Row: Frequency (P5)
				Second Row: K-Factor (P5)
P--21 F--6	Linearization of the Flowcurve: point 6	Input Value	Factory ONLY	First Row: Frequency (P6)
				Second Row: K-Factor (P6)
P--22 F--7	Linearization of the Flowcurve: point 7	Input Value	Factory ONLY	First Row: Frequency (P7)
				Second Row: K-Factor (P7)
P--23 F--8	Linearization of the Flowcurve: point 8	Input Value	Factory ONLY	First Row: Frequency (P8)
				Second Row: K-Factor (P8)
P--24 F--9	Average K-Factor	Input Value	Factory ONLY	First Row: Frequency (P)
				Second Row: K-Factor (P)

Liquid Turbine Flow Meter
Operation Manual

Passwords	Code	Functions	Parameters	Note
5555		Total Flow Reset		
5678		Storage Factory Defaulted	Save factory defaults	Backup current settings
1111		Reload Factory Defaults	Reload factory defaults	Restore factory parameters from backup area

6. PRESSURE DROP

DN	Standard Range	Extend Range	Start Flow	Max Pressure Drop
(mm)	(m³/h)	(m³/h)	(m³/h)	*1(kPa)
4	0.04~0.25	0.04~0.4	0.02	120
6	0.1~0.6	0.06~0.6	0.05	80
10	0.2~1.2	0.15~1.5	0.07	50
15	0.6~3.6	0.5~5	0.35	35
20	0.8~8	0.45~9	0.3	35
25	1~10	0.5~10	0.4	35
32	1.5~15	0.8~15	0.6	35
40	2~20	1~20	0.6	35
50	4~40	2~40	1	35
65	7~70	5~70	4	25
80	10~100	7~100	5	25
100	20~200	10~200	8	25
125	25~250	13~250	10	25
150	30~300	15~300	12	25
200	80~800	40~800	20	25

7. TROUBLESHOOTING

Symptom	Problem Cause	Solution
More Volume/ Output than Displayed or Registered	1. Rotor may drag due to foreign matter obstruction	Check for debris inside the meter. Clean and reassemble.
	2. Magnetic pickup not screwed down all the way into the turbine flowmeter body. This causes it not to detect all the rotor blades as they pass	Screw the magnetic pickup all the way down into the turbine flow-meter body. Hand-tighten only
	3. Turbine flowmeter rotor installed backward	Install the flowmeter in accordance with the process flow direction
	4. Turbine flowmeter rotor installed backwards	Install the flowmeter rotor in accordance with the process flow direction
	5. K-factor is too high in electronic/readout device	Verify K-factor used. K-factor should be decreased.
Less volume/ Output than displayed or registered	1. Caused by trapped air in the process line	Install an air eliminator upstream of turbine flowmeter
	2. K-factor is too low in electronic/readout device	Verify K-factor used. K-factor should be increased.
Flow rate indication is unstable	1. Battery Power Type: Bad contact on the connector between battery and PCB	Open back cover and repower the flow meter
	2. DC Power Type: supply voltage is abnormal	Check and ensure power supply is 24V DC

Other Products

Applications: Liquid Flow Measurement

Electromagnetic Flow Meter Series



Vortex Flow Meter Series



Variable Area Flow Meter Series

